

REPAIR INSTRUCTIONS

REV3

DK73-000 POLE GUN

5000 psi (345 bar, 34.5 MPa) Maximum Working Pressure

The spray tip is not included with the gun. Order the tip separately

Part No. DK73-030 1 feet (300 mm) length


Part No. DK73-060 2 feet (600 mm) length

Part No. DK73-090 3 feet (910 mm) length

Part No. DK73-120 4 feet (1.2 m) length

Part No. DK73-180 6 feet (1.8 m) length

Part No. DK73-240 8 feet (2.4 m) length

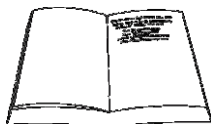


This manual contains important warning and information.

Read and keep reference.

WARNING

	INJECTION HAZARD Spray from the spray gun, hose leaks or ruptured components can inject fluid into your body and cause extremely serious injury, including the need for amputation. Splashing fluid in the eyes or on the skin can also cause serious injury. _ Fluid injected into the skin is a serious injury. The injury may look like just a cut, but it is a serious injury. Get immediate medical attention. _ Do not point the gun at anyone or any part of the body. _ Do not put hand or fingers over the spray tip. _ Do not stop or deflect leaks with your hand, body, glove or rag. _ Do not “blow back” fluid; this is not an air spray system. _ Always have the tip guard on the spray gun when spraying _ Check the spray gun diffuser (if so equipped) operation weekly. Refer to the gun manual. _ Be sure the spray gun safety knob operates before operating the gun. _ Lock the spray gun safety knob when you stop spraying. _ Follow the Pressure Relief Procedure on page 3 when you are instructed to relieve pressure, stop spraying, check, clean or service any system equipment, or install or change spray tips. _ Tighten all fluid connections before each use. _ Check the hoses, tubes and couplings daily. Replace worn or damaged parts immediately. Permanently coupled hoses cannot be repaired. _ Handle and route hoses and tubes carefully. Keep hoses and tubes away from moving parts and hot surfaces. Do not use the hoses to pull equipment. Do not expose FLOTECH hoses to temperatures above 150_F (66_C) or below -40_F (-40_C).	 INSTRUCTIONS	EQUIPMENT MISUSE HAZARD Equipment misuse can cause the equipment to rupture, malfunction, or start unexpectedly and result in serious injury. _ This equipment is for professional use only. _ Read all instruction manuals, tags, and labels before operating the equipment. _ Use the equipment only for its intended purpose. If you are uncertain about the usage, call your distributor. _ Do not alter or modify this equipment. Use only genuine FLOTECH parts and accessories. _ Check the equipment daily. Repair or replace worn or damaged parts immediately. _ Do not exceed the maximum working pressure of the lowest rated system component. This equipment as a 5000 psi (345bar) maximum working pressure. _ Do not lift pressurized equipment. _ Route the hoses away from the traffic areas, sharp edges, moving parts, and hot surfaces. Do not expose FLOTECH hoses to temperatures above 150_F (66_C) or below -40_F (-40_C). _ Do not use the hoses to pull the equipment. _ Use fluids or solvents that are compatible with the equipment wetted parts. See the Technical Data section of all the equipment manuals. Read the fluid and solvent manufacturer’s warnings. _ Fluid hoses must have spring guards on both ends to protect them from rupture caused by kinks or bends near the couplings. _ Comply with all applicable local, state and national fire, electrical and other safety regulations.
	TOXIC FLUID HAZARD Hazardous fluids or toxic fumes can cause a serious injury or death if splashed in the eyes or on the skin, inhaled, or swallowed. _ Know the specific hazards of the fluid you are using. _ Store hazardous fluid in an approved container. _ Dispose hazardous fluid according to all local, state and national guidelines. _ Always wear protective eyewear, gloves, clothing and recommended by the fluid and solvent manufacturer.		FIRE AND EXPLOSION HAZARD Improper grounding, poor air ventilation, open flames, or sparks can cause a hazardous condition and result in fire or explosion and serious injury. _ Ground the equipment and the object being sprayed. _ Provide fresh air ventilation to avoid the buildup of flammable fumes from solvent or the fluid being sprayed. _ Extinguish all the open flames or pilot lights in the spray area. _ Electrically disconnect all the equipment in the spray area. _ Keep the spray area free of debris, including solvent, rags, and gasoline. _ Do not turn on or off any light switch in the spray area while operating or if fumes are present. _ Do not smoke in the spray area. _ Do not operate a gasoline engine in the spray area. _ If there is any static sparking while using the equipment, stop spraying immediately. Identify and correct the problem.
	MOVING PARTS HAZARD Moving parts, such as the air motor piston and the secondary pump lever and connecting rod area, can pinch or amputate fingers. _ Do not operate the equipment with the air motor plates removed. _ Keep your body and tools clear of any moving parts when starting or operating the equipment.		

Parts drawing and Parts List

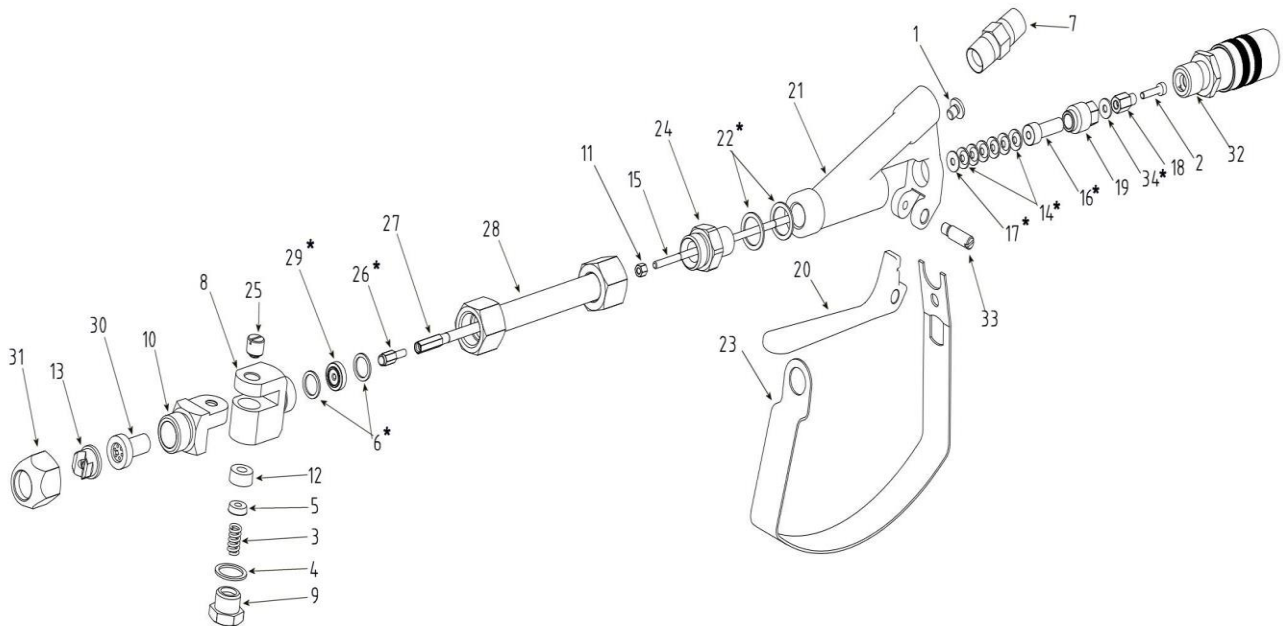

No	Code	Description	Qty	No	Code	Description	Qty
1	DK73-001	Screw	1	18	DK73-018	NUT	1
2	DK73-002	Cap Screw	1	19	DK73-019	SCREW	1
3	DK73-003	Spring	1	20	DK73-020	HANDLE	1
4	DK73-004	Gasket (copper)	1	21	DK73-021	BODY	1
5	DK73-005	Washer	1	22	DK73-022	GASKET (copper)	2
6	DK73-006	Gasket (copper)	2	23	DK73-023	GUARD	1
7	DK73-007	Nipple	1	24	DK73-024	ADAPTER	1
8	DK73-008	HOUSING, swivel	1	25	DK73-025	SCREW	1
9	DK73-009	Plug	1	26	DK73-026	STEM. valve	1
10	DK73-010	NOZZLE, swivel	1	*27	DK73-027-3	STEM, extension (3ft)	1
11	DK73-011	NUT	1		DK73-027-6	STEM, extension (6ft)	1
12	DK73-012	SEAL,	1	*28	DK73-028-3	TUBE, extension (3ft)	1
*13	G269xxx	TIP	.1		DK73-028-6	TUBE, extension (6ft)	1
14	DK73-014	V-Packing	6	29	DK73-029	SEAT	1
15	DK73-015	ROD	1	*30	DK-KS1060	TIP FILTER	1
16	DK73-016	GLAND (F)	1	31	DK345-01	TIP GUARD	1
17	DK73-017	GLAND (M)	1	32	DK73-032	SAFETY KNOB	1
				33	DK73-033	SCREW	1
				34	DK73-034	WASHER	1

Note : part marked * are the option parts

Replacement Danger and Warning labels, tags and cards are available at no cost.

These parts are included in repair kit which may be purchased separately.

DK214-822 include item no 6, 14, 16, 17, 22, 26, 29

DK162-600 include item no 3, 4, 5, 8, 9, 10, 12, 25, 31

Always use genuine FLOTECH parts.

FLOTECH Standard Warranty

FLOTECH warrants all equipment referenced in this document which is manufactured by FLOTECH and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by FLOTECH, FLOTECH will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by FLOTECH to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with FLOTECH written recommendations.

This warranty does not cover, and FLOTECH shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-FLOTECH component parts. Nor shall FLOTECH be liable for malfunction, damage or wear caused by the incompatibility of FLOTECH equipment with structures, accessories, equipment or materials not supplied by FLOTECH, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by FLOTECH.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized FLOTECH distributor for verification of the claimed defect. If the claimed defect is verified, FLOTECH will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

FLOTECH sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within six months of the date of sale.

FLOTECH MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD

BUT NOT MANUFACTURED BY FLOTECH. These items sold, but not manufactured by FLOTECH (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. FLOTECH will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will FLOTECH be liable for indirect, incidental, special or consequential damages resulting from FLOTECH supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of FLOTECH or otherwise.

FLOTECH Information

TO PLACE AN ORDER OR FOR SERVICE, contact your FLOTECH distributor, or call these numbers to identify the nearest distributor.